

OPERATION MANUAL

**EXCAVATOR
R16-9**

HYUNDAI

Foreword	0-1	7. Operation in the special work sites	4-15
Before servicing this machine	0-2	8. Normal operation of excavator	4-17
EC regulation approved	0-3	9. Attachment lowering	4-18
Table to enter S/No and distribution	0-4	10. Storage	4-19
Safety labels	0-5	11. RCV lever operating pattern	4-21
Machine data plate	0-13		
Guide (direction, S/No, Symbol)	0-14		
1. SAFETY HINTS		5. TRANSPORTATION	
1. Before operating the machine	1-1	1. Preparation for transportation	5-1
2. During operating the machine	1-6	2. Loading the machine	5-2
3. During maintenance	1-13	3. Fixing the machine	5-4
4. Parking	1-16	4. Loading and unloading by crane	5-5
2. SPECIFICATIONS		6. MAINTENANCE	
1. Major components	2-1	1. Instruction	6-1
2. Specifications	2-2	2. Tightening torque	6-5
3. Working range	2-3	3. Fuel, coolant and lubricants	6-8
4. Weight	2-4	4. Maintenance check list	6-10
5. Lifting capacities	2-5	5. Maintenance chart	6-15
6. Bucket selection guide	2-7	6. Service instruction	6-17
7. Undercarriage	2-8	7. Electrical system	6-34
8. Specification for major components	2-9	7. TROUBLESHOOTING GUIDE	
9. Recommended oils	2-12	1. Engine	7-1
3. CONTROL DEVICES		2. Electrical system	7-2
1. Canopy devices	3-1	3. Others	7-3
2. Cluster	3-2	8. HYDRAULIC BREAKER	
3. Switches	3-6	1. Selecting hydraulic breaker	8-1
4. Levers and pedals	3-8	2. Circuit configuration	8-2
5. Others	3-11	3. Maintenance	8-3
4. OPERATION		4. Precaution when operating the breaker	8-4
1. Suggestion for new machine	4-1	5. Quick clamp	8-6
2. Check before starting the engine	4-2		
3. Starting and stop the engine	4-3		
4. Operation of the working device	4-7		
5. Traveling of the machine	4-8		
6. Efficient working method	4-11		

EC Declaration of conformity - update 04/01/'10

1. We hereby declare that the following machine comply with the machine directive 2006/42/EC, EMC-directive 2004/108/EC, Non-road mobile machinery emission directive 97/68/EC (amended by 2002/88/EC, 2004/26/EC, 2006/105/EC) and noise emission 2000/14/EC (amended by 2005/88/EC).

Excavator	Model :	*****
	Serial Nr. :	***

2. Manufacturer	Hyundai Heavy Industries Co. Ltd. 1 Chonha-Dong, Dong-Ku Ulsan The republic of Korea
-----------------	---

Authorized representative : Owner of the technical file for machine production. (TCF : Technical Construction File)	Hyundai Heavy Industries Europe N.V. Vossendal 11 2440 Geel Belgium
--	--

3. Harmonized European directives :	EN474-1:2006 +A1:2009, EN474-5: 2006, EN ISO 12100-1:2003, EN ISO 12100-2:2003, EN ISO 2867:2008, EN ISO 7096:2008, EN ISO 6683:2008, EN ISO 2860:2008, EN ISO 6682:2008, EN ISO 3744:2009, EN 982:1996+A1:2008, EN ISO 3457:2008 EN ISO 2860:2008, EN ISO 7096:2008, ISO 5006: 2006
-------------------------------------	--

4. Noise level :	
Certain n° :	e13*2000/14*2005/88*0059*08
Date :	2009-06-17
Conformity assessment procedure :	Attachment VIII following the periodical inspection on technical extended with "Information on the scope of delivery" by TÜV Rheinland.
Authorized entity :	Société Nationale de Certification et d'Homologation s.à r.l CE0499 11, route de Luxembourg 5230 Sandweiler Luxemburg
Engine power :	*** kW
Guaranteed sound power level :	*** dB (A)

5. Remarks

Managing Director

Geel, Belgium


//*****

4. OPERATION OF WORKING DEVICE

※ **Confirm the operation of control lever and working device.**


- 1) Left control lever controls arm and swing.
- 2) Right control lever controls boom and bucket.
- 3) When you release the control lever, control lever returns to neutral position automatically.

※ **When operating swing, consider the swing distance by inertia.**

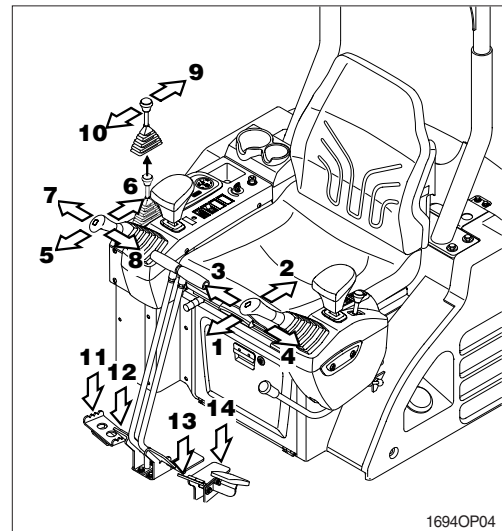

※ **Left control lever**

- 1 Arm roll-out
- 2 Arm roll-in
- 3 Swing right
- 4 Swing left

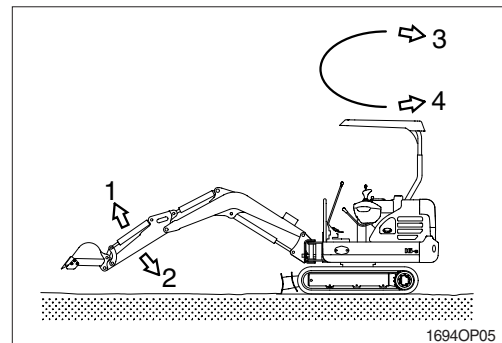


※ **Right control lever**

- 5 Boom lower
- 6 Boom raise
- 7 Bucket roll-out
- 8 Bucket roll-in

※ **Dozer control lever**

- 9 Dozer blade up
- 10 Dozer blade down

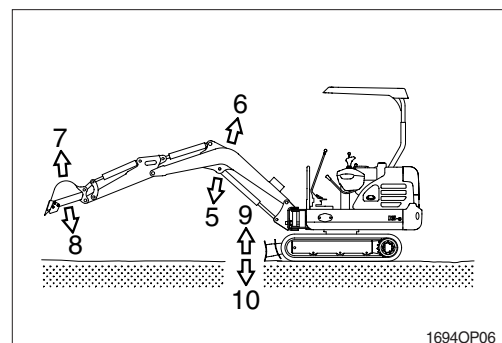


※ **Boom swing pedal**

- 11 Boom swing right
- 12 Boom swing left

※ **Double acting pedal**

- 13, 14 Refer to optional attachment

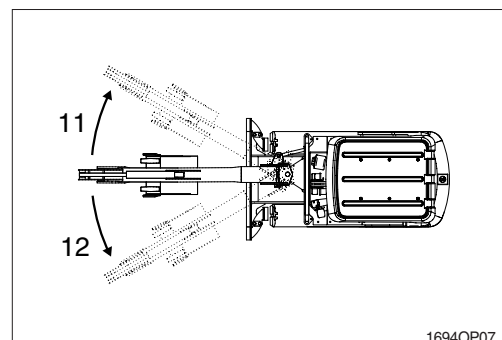

5. TRAVELING OF THE MACHINE

1) BASIC OPERATION

(1) Traveling position


It is the position which the traveling motor is in the rear and the working device is forward.

- ▲ **Be careful as the traveling direction will be reversed when the whole machine is swung 180 degree.**

(2) Traveling operation

It is possible to travel by either travel lever or pedal.


- ※ **Do not travel continuously for a long time.**
- ※ **Reduce the engine speed and travel at a low speed when traveling on uneven ground.**

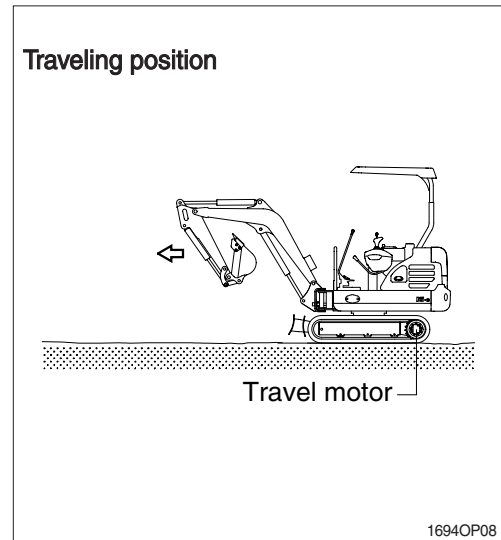

(3) Forward and backward traveling


When the left and right travel lever or pedal are pushed at the same time, the machine will travel forward or backward.

- ※ **The speed can be controlled by the operation stroke of lever or pedal and change of direction will be controlled by difference of the left and right stroke.**

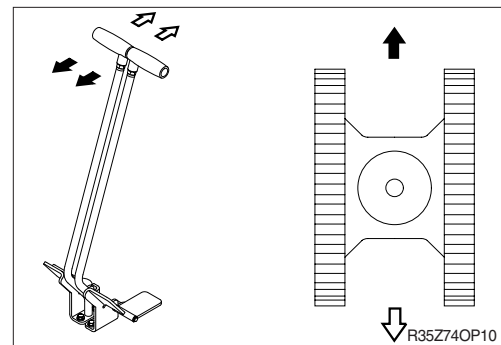


(4) Pivot turning

Operating only one side of lever or pedal make the change of direction possible by moving only one track.

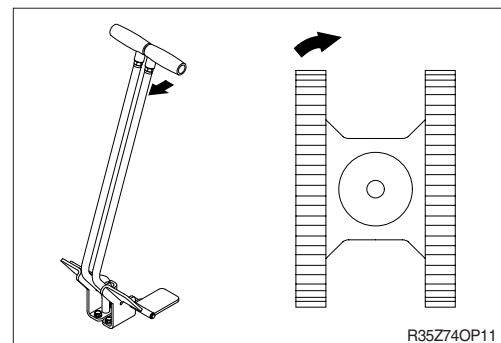

(5) Counter rotation

It is to change the direction at the original place by moving the right and left track. Both side of lever or pedal are operated to the other way at the same time.

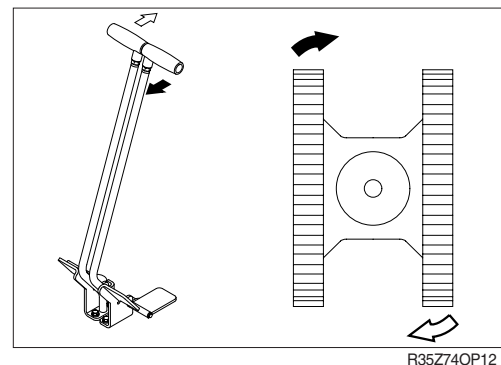

2) PIPE AND HOSE (FLARE type)

Thread size (PF)	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130
1"	41	21	152
1-1/4"	50	35	253

3) PIPE AND HOSE (ORFS type)

Thread size (UNF)	Width across flat (mm)	kgf · m	lbf · ft
9/16-18	19	4	28.9
11/16-16	22	5	36.2
13/16-16	27	9.5	68.7
1-3/16-12	36	18	130
1-7/16-12	41	21	152
1-11/16-12	50	35	253


4) FITTING

Thread size	Width across flat (mm)	kgf · m	lbf · ft
1/4"	19	4	28.9
3/8"	22	5	36.2
1/2"	27	9.5	68.7
3/4"	36	18	130
1"	41	21	152
1-1/4"	50	35	253

4) TIGHTENING TORQUE OF MAJOR COMPONENT

No.	Descriptions	Bolt size	Torque		
			kgf · m	lbf · ft	
1	Engine	Engine mounting bolt (engine-bracket)	M10 × 1.25	7.4±1.5	53.5±11.0
2		Engine mounting bolt (bracket-frame)	M12 × 1.75	12.3±1.5	89±11.0
3		Radiator mounting bolt, nut	M 8 × 1.25	1.17±0.1	8.5±0.7
4		Coupling mounting bolt	M10 × 1.5	5.15±0.25	37.2±1.8
5	Hydraulic system	Main pump mounting bolt	M12 × 1.75	10±1.0	72±7.2
6		Main control valve mounting bolt	M10 × 1.5	6.9±1.4	50±10.0
7		Fuel tank mounting bolt	M10 × 1.5	6.9±1.4	50±10.0
8		Hydraulic oil tank mounting bolt	M10 × 1.5	6.9±1.4	50±10.0
9		Turning joint mounting bolt, nut	M10 × 1.5	6.9±1.4	50±10.0
10	Power train system	Swing motor mounting bolt	M12 × 1.75	12.8±3.0	93±22.0
11		Swing bearing upper mounting bolt	M12 × 1.75	12.8±3.0	93±22.0
12		Swing bearing lower mounting bolt	M12 × 1.75	12.8±3.0	93±22.0
13		Travel motor mounting bolt	M10 × 1.5	6.9±1.4	50±10.0
14		Sprocket mounting bolt	M10 × 1.5	6.9±0.7	50±5.1
15	Under carriage	Track roller mounting bolt	M12 × 1.75	12.3±1.2	89±8.7
17	Others	Counterweight mounting bolt	M16 × 2.0	29.7±4.5	215±32.5
18		Canopy mounting bolt, nut	M12 × 1.75	12.8±3.0	92±22.0
19		Operator's seat mounting bolt	M 8 × 1.25	1.17±0.1	8.5±0.7

5. MAINTENANCE CHART

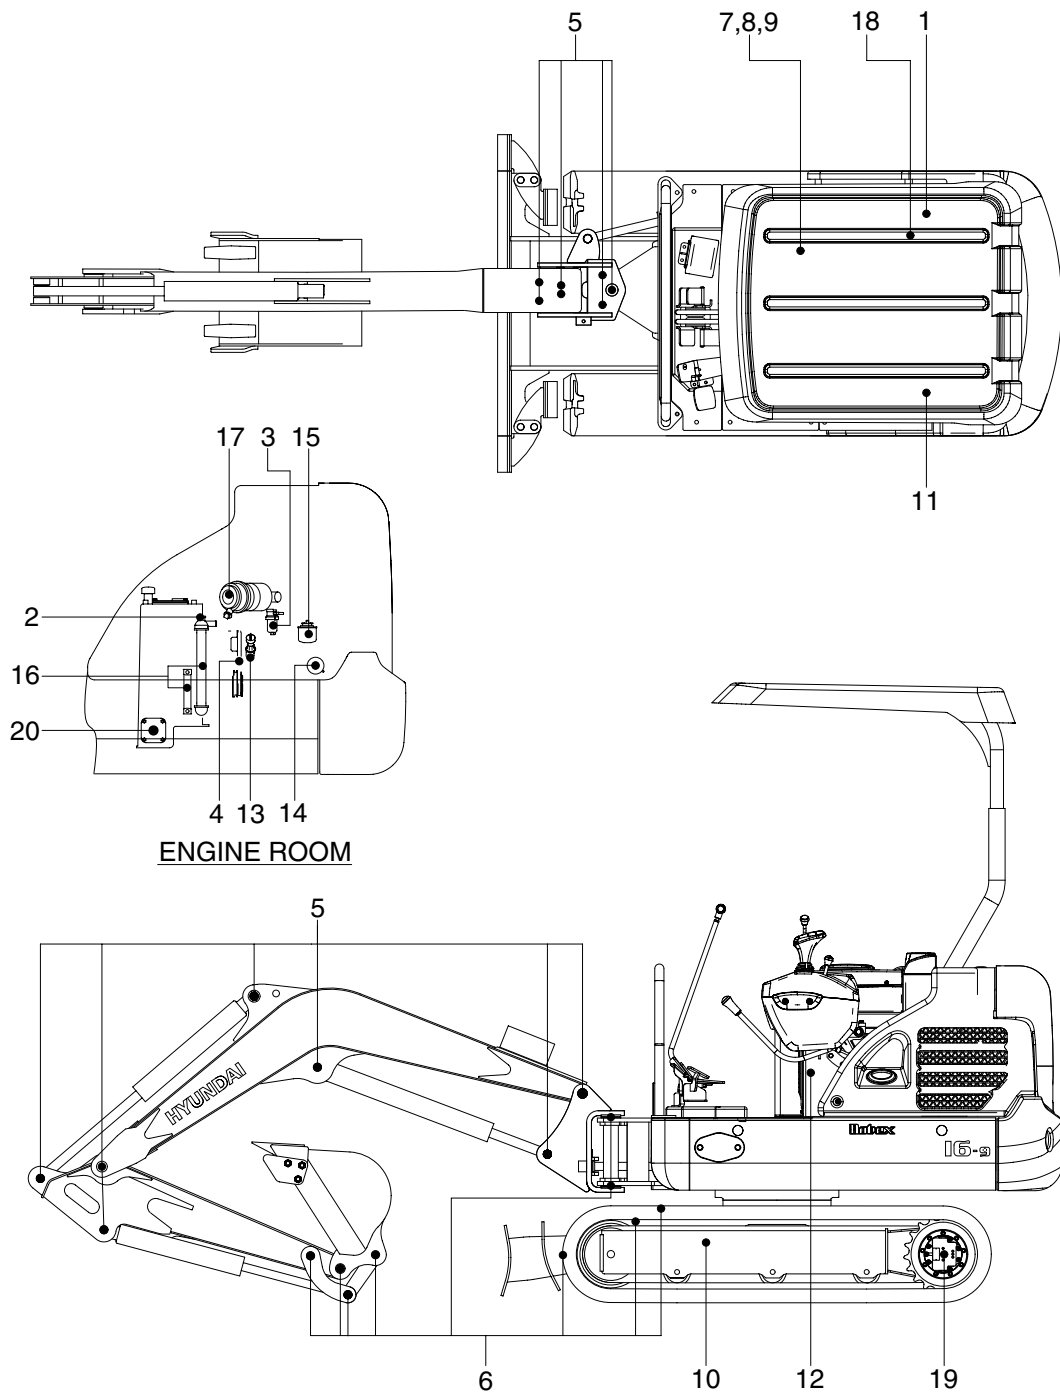

1696MA16

Caution

1. Service intervals are based on the hour meter reading.
2. The number of each item shows the lubrication point on the machine.
3. Stop engine while filling oil, and use no open flames.
4. For other details, refer to the service manual.

Diesel Engines

ABS	Agco-Sisu
Akasaka	Baudouin
BMW	Bukh
Caterpillar	CHN 25/34
Cummins	Daihatsu
Detroit	Deutz
Doosan-Daewoo	Fiat
Ford	GE
Grenaa	Guascor
Hanshin	Hatz
Hino	Honda
Hyundai	Isotta
Isuzu	Iveco
John-Deere	Kelvin
Kioti	Komatsu
Kubota	Liebherr
Lister	Lombardini
MAK	MAN B&W
Mercedes	Mercruiser
Mirrlees BS	Mitsubishi
MTU	MWM
Niigata	Paxman
Perkins	Pielstick
Rolls / Bergen	Ruggerini
Ruston	Scania
Shibaura	Sisu-Valmet
SKL	Smit-Bolnes
Sole	Stork
VM-Motori	Volvo
Volvo Penta	Westerbeke
Wichmann	Yanmar

Machinery

ABG	Airman
Akerman	Ammann
Astra	Atlas Copco
Atlas Weyha.	Atlet
Bell	Bendi
Bigjoe	Bobcat
Bomag	BT
Carelift	Case
Caterpillar	Cesab
Challenger	Champion
Claas	Clark
Combilift	Crown
Daewoo-Doosan	Demag
Deutz-Fahr	Dressta

Machinery

Drott	Dynapack
Extec	Faun
Fendt	Fiat
Fiatallis	Flexicoil
Furukawa	Gehl
Genie	Grove-gmk
Halla	Hamm
Hangcha	Hanix
Hanomag	Hartl
Haulpack	Hiab
Hidromek	Hino truck
Hitachi	Hyster
Hyundai	IHI
Ingersoll-rand	JCB
JLG	John-Deere
Jungheinrich	Kalmar
Kato	Kioti
Kleeman	Kobelco
Komatsu	Kramer
Kubota	Lamborghini
Landini	Liebherr
Linde	Link-belt
Manitou	Massey-Ferg.
Mccormick	MDI-Yutani
Mitsubishi	Moxy
Mustang	Neusson
New-Holland	Nichiyu
Nissan	OK
OM-Pimespo	others-tech
Pel-Job	PH-mining
Poclain	Powerscreen
Same	Samsung
Sandvik	Scania
Schaefer	Schramm
Sennebogen	Shangli
Shibaura	Steiger
Steinbock	Steyr
Still	Sumitomo
Super-pac	Tadano
Takeuchi	TCM
Terex	Toyota
Valpadana	Venieri
Versatile	Vogele
Volvo	Weidemann
Wirtgen	Yale
YAM	Yanmar